






## LED Tail Light Kit Installation Instructions

Covers Part #8385





### Installation of the LED Light Harnesses in the Vehicle Body

1. Remove the 3mm screw (A) from the center of the tail light lens (B) using a 2.0mm hex wrench (Fig. 1).  
**Note:** Hold the lens (B) (on the outside/rear of the vehicle body) and the clamp (D) (on the inside/rear of the vehicle body) so that the assembly does not rotate as you remove or install the screw.
2. Remove the lens (B), housing (C), and clamp (D) from the vehicle body (Fig. 1).
3. Carefully push the red female connector of the LED assembly (E) through the tail light hole from the outside/rear of the vehicle (Fig. 2).  
**Note:** This may require extra force since the hole is slightly smaller than the female connector.
4. Place the wire of the LED assembly (F) into the housing slot as shown as you install it into the housing (Fig. 3).
5. Slide the LED assembly (F)/housing (C) to sit flat against the vehicle body and align the keying features (slot and peg) of the housing to the diecut features on the vehicle body.
6. Install the lens and align the clamp with the mating parts; hold in place.
7. Install the 3mm screw using a 2.0mm hex driver.  
**Note:** The screw should be snug only; do not overtighten.
8. Repeat all steps for the other tail light.

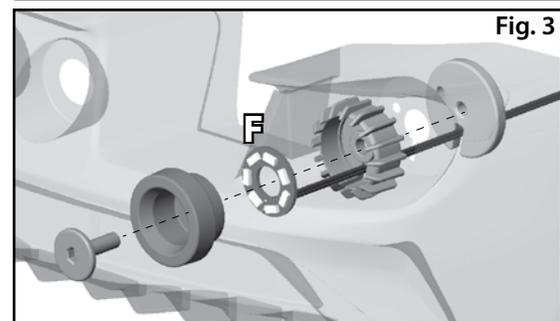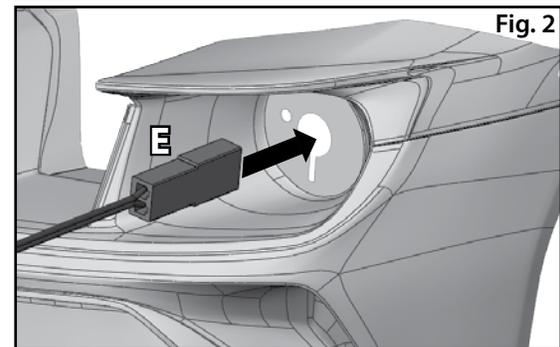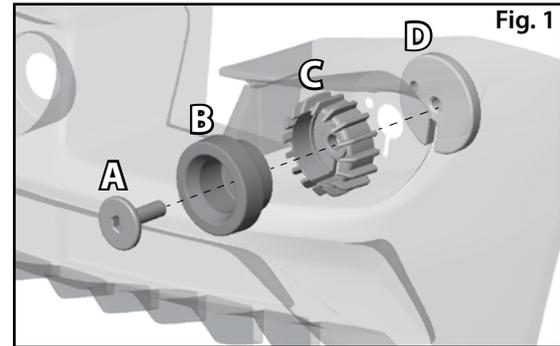

### Routing the LED Light Harnesses to the Receiver

1. Install two (2) zip-tie mounts (G1, G2) to the underside of the body. Position the zip tie mounts as shown in Fig. 4.
2. Route the LED assembly wire harnesses (F) and secure to the rear mount (G1) with a zip tie (Fig. 5).  
**Note:** Make sure to leave some slack in the LED wires between the zip tie mount and the tail light clamps to prevent damage to the LED wires.
3. Plug the LED assembly wire harnesses into the Y-harness (I). Secure the Y-harness to the front mount (G2) with a zip tie (Fig. 6).
4. Remove the three 2.5x10mm cap screws from the receiver box cover; remove the cover.
5. Plug the receiver harness (J) into any open channel on the receiver.
6. Route the harness out of the receiver box and secure it to the negative power lead of the ESC using a zip-tie (Fig. 7).
7. Make sure the O-ring is properly seated into the groove in the receiver box so that the cover will not pinch it or damage it in any way. Reinstall the cover and tighten the three 2.5x10mm cap screws securely.
8. Plug the Y-harness into the receiver harness and reinstall the vehicle body. The tail lights will turn on when the ESC is turned on.

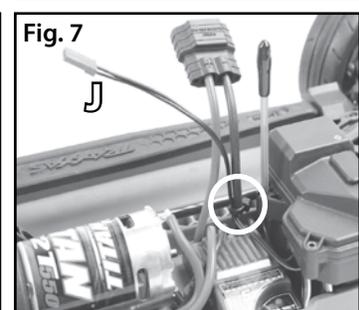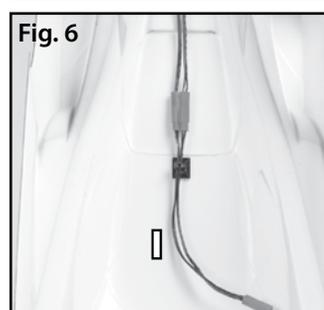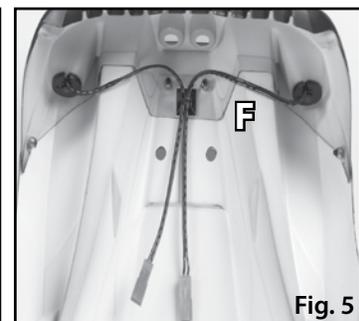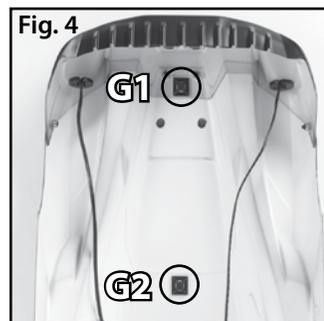

If you have questions or need technical assistance, call Traxxas at  
**1-888-TRAXXAS**  
 (1-888-872-9927) (U.S. residents only)